 


Normally Open SW
LED +
switch GND
LED - / GND


BUTTON1



4pin

Normally Open SW
LED +
switch GND
LED - / GND

 
BUTTON2



4pin

Normally Open SW
LED +
switch GND
LED - / GND

 
BUTTON3



4pin

Normally Open SW
LED +
switch GND
LED - / GND

 BUTTON4



4pin

CONN_GPIO
ELXH1210S3



GROUND
GPIO0
GPIO1
GPIO2
GPIO3
GROUND
GPIO4
GPIO5
GPIO6
GPIO7